Publication No. 261910
1/94
Supersedes 261910
1/91

INSTALLATION INSTRUCTIONS

for the SEISMIC BRACKET Kit for use on

Kodak RP X-Omat PROCESSORS

M6 Family, M7 Family, M8;

Kodak X-Omat PROCESSORS

M20, M35 Family, 460 RA, 480 RA;

M35/M43/Clinic 1 STAND

© Eastman Kodak Company, 1994

PLEASE NOTE

The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from the use of this information, even if loss or damage is caused by Kodak's negligence or other fault.

Parts List

The kit, Part No. 261413 includes:

Part No.	Description	Quantity
240104	BRACKET	4
261898	FLOOR CUP	4
261929	ANCHOR	8
188623	BOLT - Stainless Steel	8
173824	WASHER - Stainless Steel	8
261910	Installation Instructions	1

To install the BRACKET:

[1] Move the PROCESSOR or the PROCESSOR STAND to its permanent position.

[2] Install the 4 FLOOR CUPS under the 4 LEVELING SCREWS on the PROCESSOR or the PROCESSOR STAND. Align the flat side of each FLOOR CUP so that it is toward the SEISMIC BRACKET.

[3] Level the PROCESSOR or the PROCESSOR STAND by adjusting the LEVELING SCREWS.

NOTE

The maximum clearance between the PROCESSOR or the PROCESSOR STAND and the floor is 2.5 cm (1 in.).

[4] Install the 4 SEISMIC BRACKETS with the SLOTS over the LEVELING SCREWS.

[5] Align the edge of each SEISMIC BRACKET with the side, front, or back of the PROCESSOR or the PROCESSOR STAND.

[6] Make a mark on the floor through each hole in the SEISMIC BRACKETS.

[7] Remove the SEISMIC BRACKETS and drill holes in the floor. Make the holes 9.5 x 25 mm (⅜ x 1 in.).

[8] Insert the 8 ANCHORS in the holes. Be sure that the ANCHORS are flush with the floor.

[9] Insert a PUNCH or NAIL into the ANCHORS.

[10] Hit the PUNCH or NAIL with a HAMMER.

[11] Install the 4 SEISMIC BRACKETS with the 8 BOLTS and 8 WASHERS.

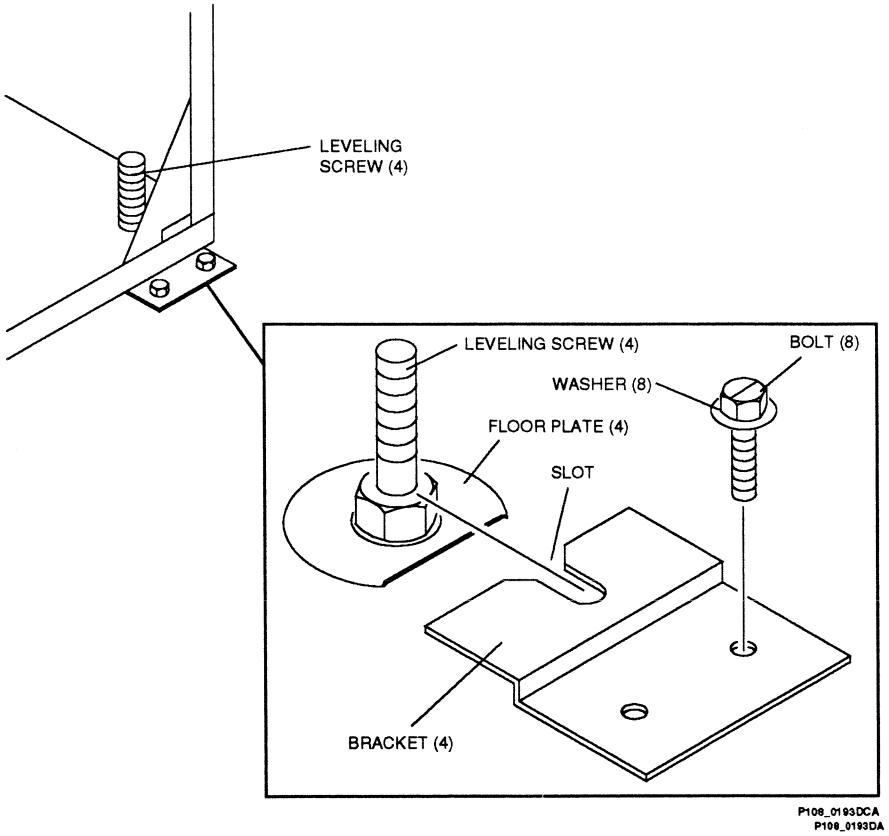

Kodak and *X-Omat* are trademarks.

Health Sciences Division

EASTMAN KODAK COMPANY • ROCHESTER, N.Y. 14650

Printed in USA